



# W12 - W10 INOX

SPARE PARTS LIST  
NT TILLER HEAD



## **GENERAL INFORMATION**

This catalogue is used for ordering the spare parts and it has been realized to answer the following requirements:

- 1 - To allow a quick identification of each component.
- 2 - To make it possible to execute safely the assembly and the disassembly operations, through clear and concise exploded view views.

The tables, the drawing, the instructions and any other contents of this catalogue are technical confidential information: it is forbidden to take off, in part or completely, these data, and they cannot be communicated to third parties without a previous written authorization by PEGASO s.r.l. from San Bonifacio (VR), who is the exclusive proprietary of them.

PEGASO s.r.l. reserves itself the right to introduce changes, without notice, into this catalogue and into the machine it refers to.

## **WARRANTY**

Pegaso s.r.l. guarantee their pallet trucks and pallet stackers from manufacturer defect for 24 months (only for European EC market) after the delivery date.

Any complaints must be sent to Pegaso s.r.l.: parts that will be found defective, will be FREE replaced with the only transport cost.

It is absolutely exclude from all sort of warranty any compensation for damage, labour cost, less of profits, etc.

Warranty expires for bad use, user's negligence, repairing carried out from not-authorized personal , tampering or not-authorized alterations, replacement with not original spare parts and accident.

In case of objections, it is established the competence of the Judicial Court of Verona (Italy).


## **WAY TO ORDER:**

To simplify the store-research and the delivery of the spare parts, keep to the following instructions and always specify:

- 1 - The machine model and serial number (shown on the identification metal label applied on the lift).
- 2 - The machine production year.
- 3 - The position number and the table in which the spare part is represented.
- 4 - The identification code of the spare part to order.
- 5 - The quantity.
- 6 - The trade name and the correct address (including telephone, fax numbers and e/mail address) of the customer to whom the goods shall be sent.
- 7 - The desired means of forwarding (if this heading is not specified, PEGASO s.r.l. will reserve itself the right to choose the most suitable means of delivery).

The orders must reach PEGASO s.r.l., Via del Lavoro 14, ZAI Est 37047 San Bonifacio (VR).

PEGASO s.r.l. does not answer for any delay due to circumstances beyond its control.

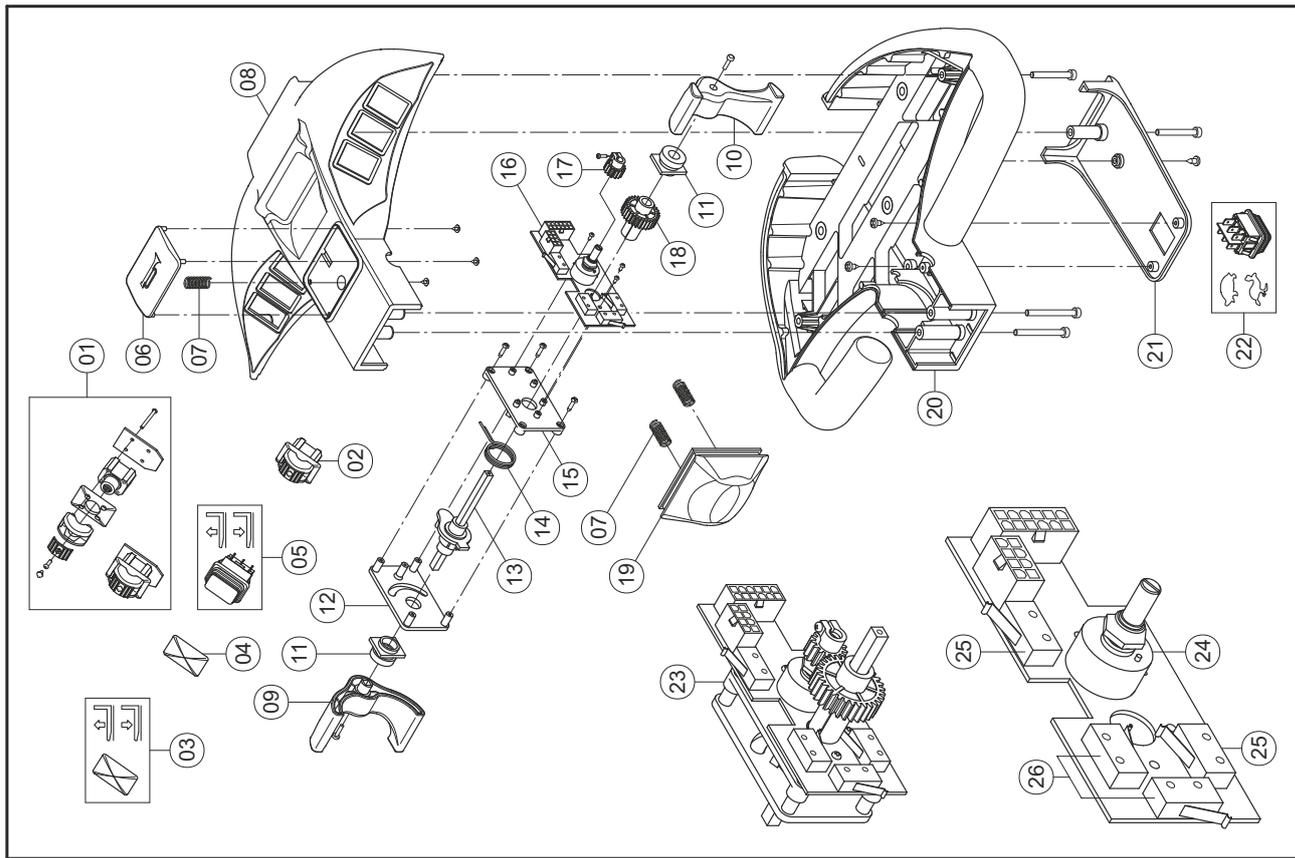

POS.	CODE	DESCRIPTION
01	FPR.PWM	Roller to control standard lifting and proportional descending (with electronic board - only stackers)
02	FPR.LZS	Roller to control proportional lifting and proportional descending (without electronic board - only stackers)
03	EMCSTA300009	Printed button cover
04	EMCSTA300009	Clean button cover
05	EEM091000003	Lifting/lowering button
06	EMCSTA300008	Horn button
07	EMGMOL100002	Spring horn button - safety travel button
08	EMCCOP300002	Front cover
09	EMCSTA300017	Left butterfly control button for direction and speed
10	EMCSTA300007	Right butterfly control button for direction and speed
11	EMCSTA300012	Spacer
12	EMCSTA300013	Left support
13	EMCSTA300016	Butterfly driven shaft
14	EMGMOL100000	Twist spring
15	EMCSTA300014	Right support
16	IST1PEGA0002	Electronic card with 20k potentiometer
17	EMCING300000	Potentiometer gear Z15
18	EMCING300006	Main gear
19	EMCSTA300011	Safety travel button
20	EMGBTT300000	Tiller head base
21	EMCSTA300010	Rear cover
22	EEM092000000	Slow/fast speed selector
23	FARACO40002	Controller unit for Nuova Elettra NT (without butterfly control buttons)

SPECIFIC SPARE PARTS FOR ELECTRONIC CARD:

POS.	CODE	DESCRIPTION
24	EET032020360	20k potentiometer
25	EEM097003002	Left microswitch and horn
26	EEM097003003	Right microswitch and safety travel button





# Pegaso Lift


## PH13 SERIES


WIRING PLAN OF TILLER HEAD

CONNECTOR/COLOR:	FUNCTION
WHITE+BLACK	SPEED REDUCTION OUTPUT
CN1/01: RED+BLACK	BATTERY CHARGER INIBIT OUTPUT
CN1/02: RED+BLACK	TILLER ARM SWITCH INPUT
CN1/03: RED+BLACK	SWITCH POSITIVE
CN1/05: LIBERO	(POSSIBLE OUTPUT RED+BLACK)
CN1/06: LIBERO	(POSSIBLE OUTPUT RED+BLACK)
CN1/07: BLUE+BLACK	HORN
CN1/08: PINK	TILLER ARM SWITCH OUTPUT
CN1/09: PINK	TO ELECTRONIC CONTROLLER
CN1/10: PINK	BRIDGE WITH CN2
CN1/11: LIBERO	(POSSIBLE OUTPUT WHITE+AZURE)
CN1/12: WHITE+AZURE	BELLY BUTTON OUTPUT TO ELECTRONIC CONTROLLER
CN2/01: PINK	SLOWFAST SELECTOR
CN2/02: VIOLA	(POSSIBLE OUTPUT RED+BLACK)
CN2/03: PINK	BRIDGE WITH CN1
CN2/04: WHITE	BACKWARD SWITCH OUTPUT
CN2/05: BLUE	FORWARD SWITCH OUTPUT
CN2/06: ORANGE	POSITIVE OF POTENTIOMETER
CN2/07: GREEN	POTENTIOMETER WHIPER
CN2/08: BROWN	NEGATIVE OF POTENTIOMETER

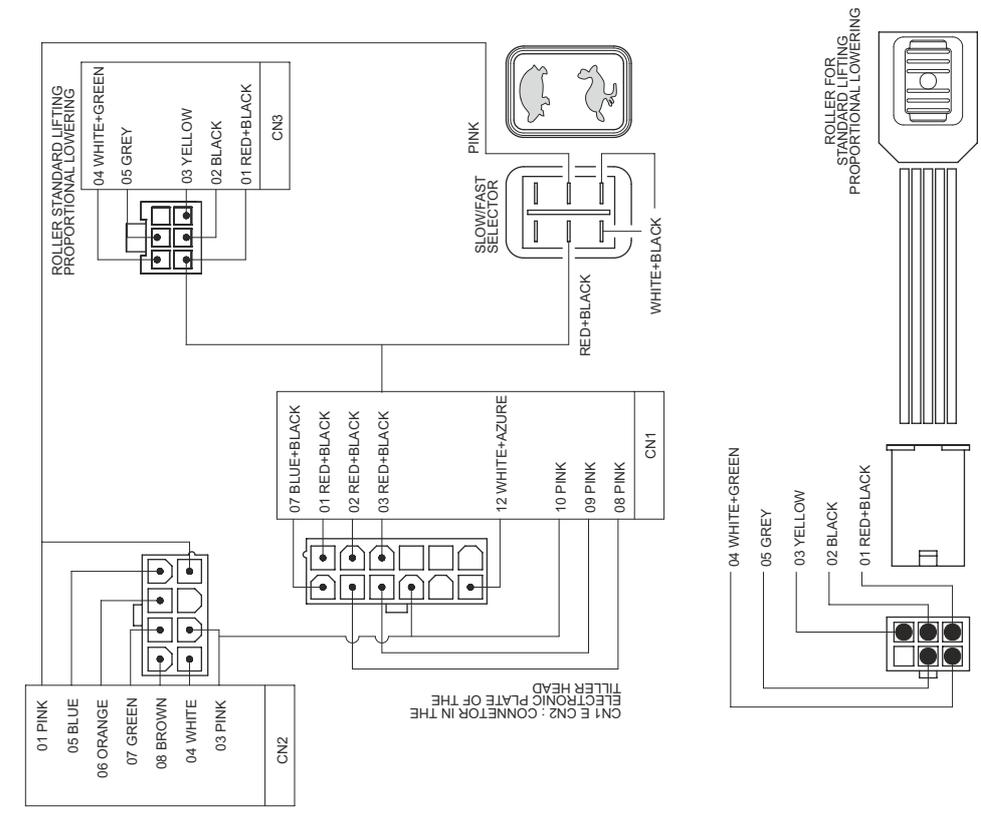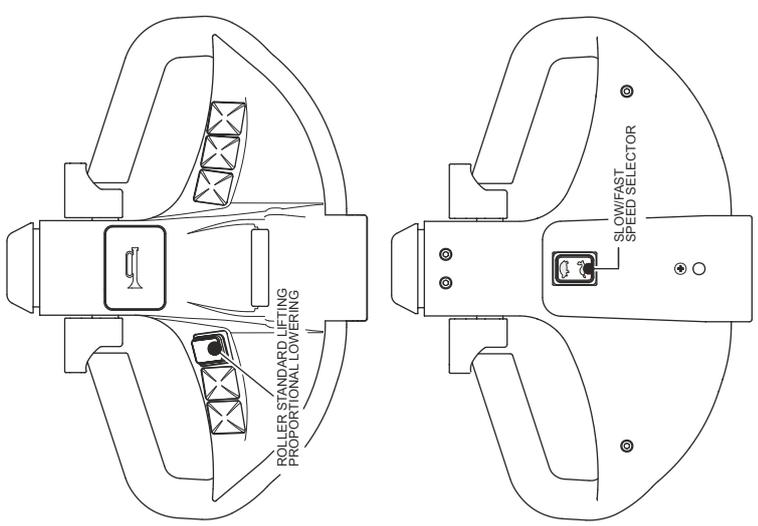


CONNECTOR/COLOR:	FUNCTION
01 RED+BLACK	POSITIVE SUPPLY
02 BLACK	NEGATIVE SUPPLY
03 YELLOW	PROPORTIONAL LOWERING CONTROL
04 WHITE+GREEN	PROPORTIONAL LOWERING CONTROL
05 GREY	NEGATIVE OF OLEODYNAMIC POWER UNIT ELECTROMAGNETIC SWITCH

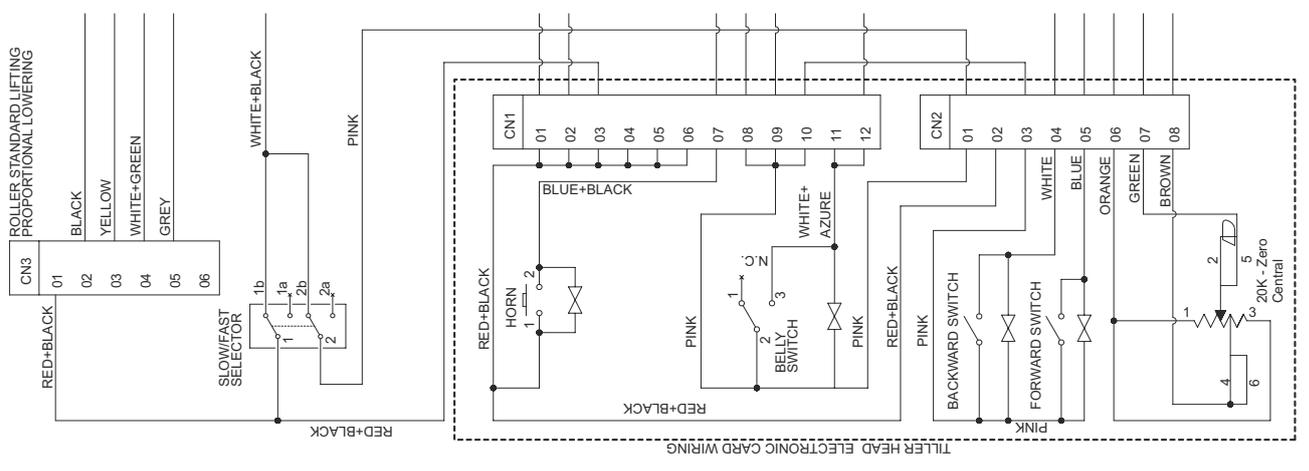

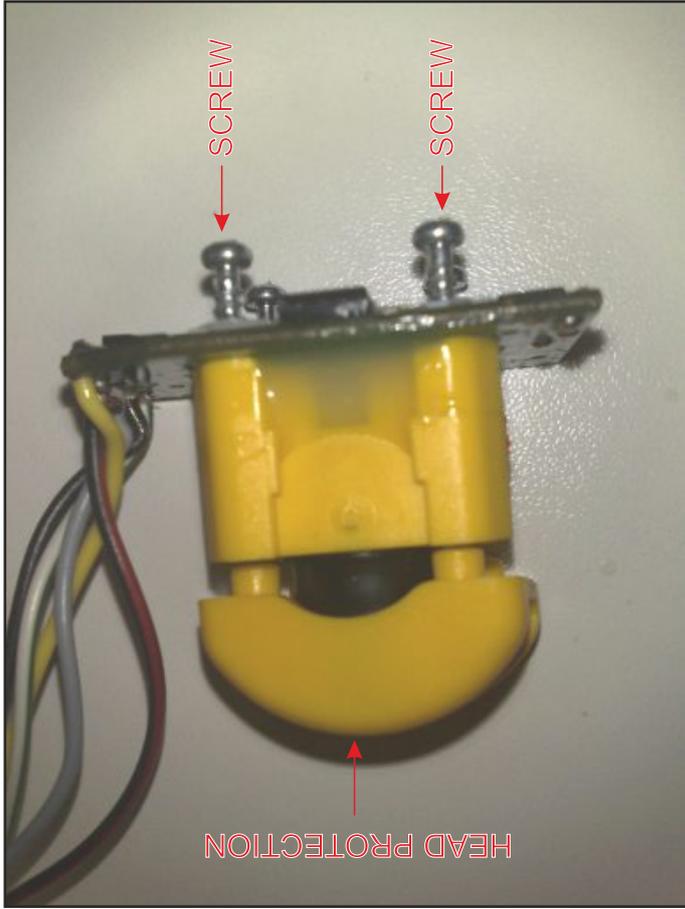


STEP 3: UNSCREW THE 4 LOWER SCREWS TO REMOVE THE HEAD PROTECTION

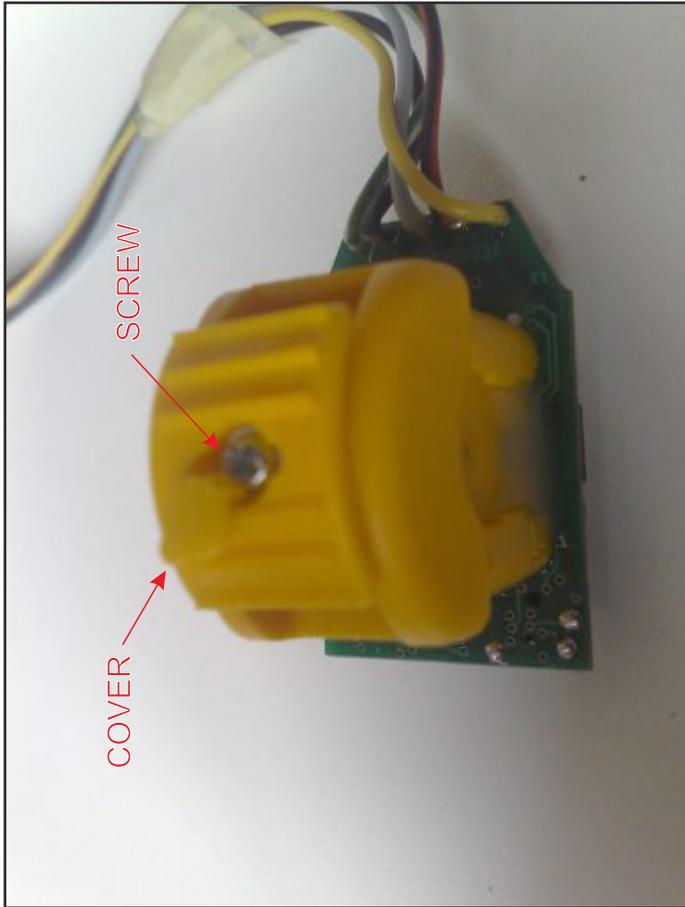

STEP 1: REMOVE THE COVER TO SHOW THE SCREW



STEP 2: UNSCREW THE SCREW AND REMOVE THE ROLLER HEAD

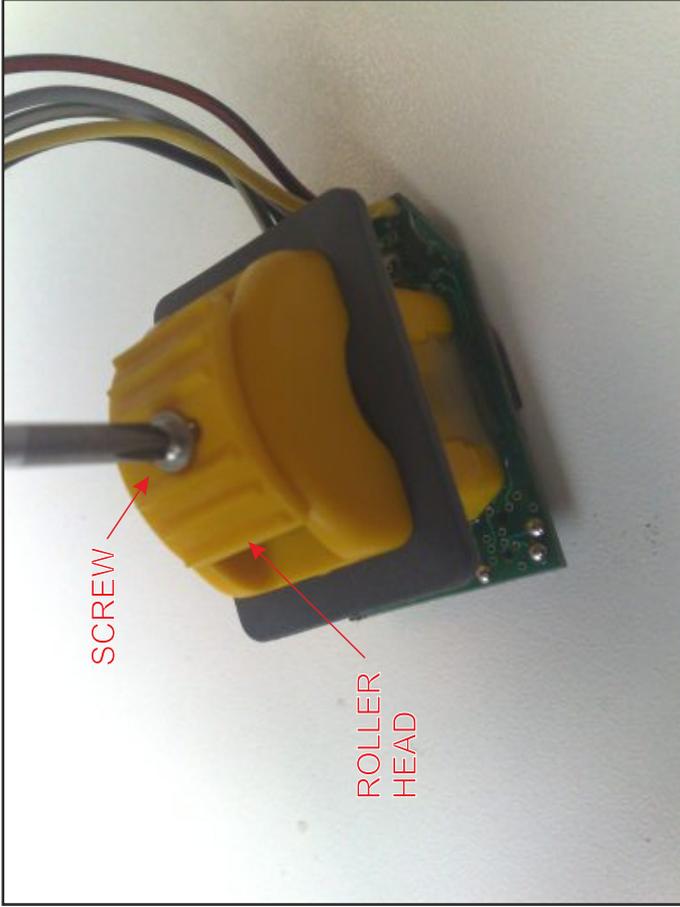


STEP 6: FIX THE ROLLER HEAD SCREWING THE SCREW



STEP 7: REPLACE THE COVER



STEP 4: INSERT THE TAG TO FIX THE ROLLER ON THE TILLER HEAD

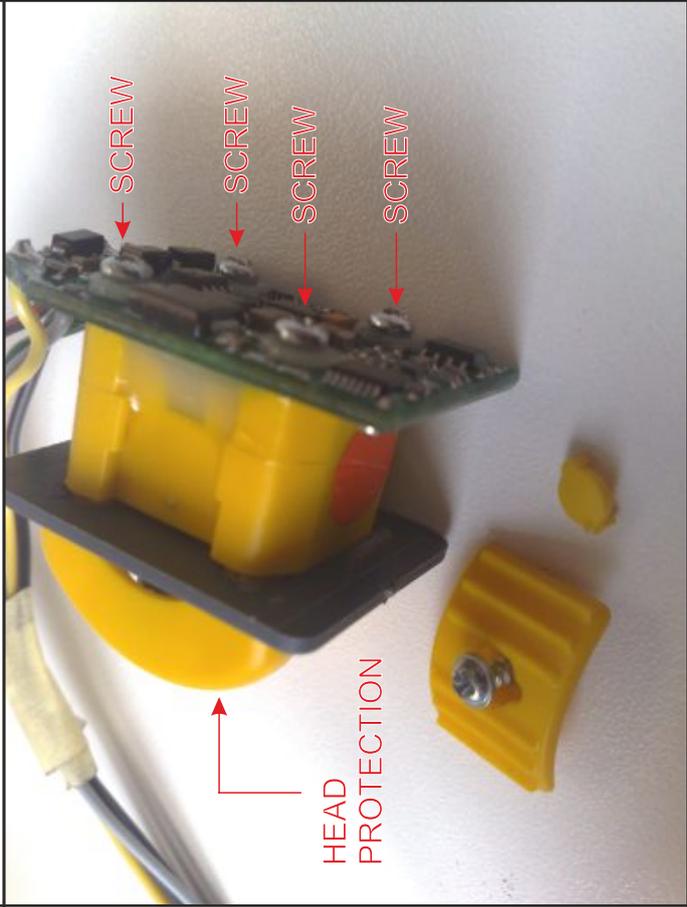

STEP 5: FIX THE HEAD PROTECTION SCREWING THE 4 LOWER SCREW



Via del Lavoro 14 - 37047  
San Bonifacio (VR - Italy)

Tel.: +39 045 766.55.70  
FAX: +39 045 766.56.98

E-Mail:  
[info@pegasolift.com](mailto:info@pegasolift.com)

Web-site:  
[www.pegasolift.com](http://www.pegasolift.com)