



W12

SPARE PARTS MANUAL PALLET STACKERS



UK



GENERAL INFORMATION

This catalogue is used for ordering the spare parts and it has been realized to answer the following requirements:

- 1 - To allow a quick identification of each component of machine.
- 2 - To make it possible to execute safely the assembly and the disassembly operations, through clear and concise exploded view views.

The tables, the drawing, the instructions and any other contents of this catalogue are technical confidential information: it is forbidden to take off, in part or completely, these data, and they cannot be communicated to third parties without a previous written authorization by PEGASO s.r.l. from San Bonifacio (VR), who is the exclusive proprietary of them.

PEGASO s.r.l. reserves itself the right to introduce changes, without notice, into this catalogue and into the machine it refers to.

WARRANTY

Pegaso s.r.l. guarantee their pallet trucks and pallet stackers from manufacturer defect for 24 months (only for European EC market) after the delivery date.

Any complaints must be sent to Pegaso s.r.l.: parts that will be found defective, will be FREE replaced with the only transport cost.

It is absolutely exclude from all sort of warranty any compensation for damage, labour cost, less of profits, etc.

Warranty expires for bad use, user's negligence, repairing carried out from not-authorized personal , tampering or not-authorized alterations, replacement with not original spare parts and accident.

In case of objections, it is established the competence of the Judicial Court of Verona (Italy).

WAY TO ORDER:

To simplify the store-research and the delivery of the spare parts, keep to the following instructions and always specify:

- 1 - The machine model and serial number (shown on the identification metal label applied on the lift).
- 2 - The machine production year (shown on the identification metal label).
- 3 - The position number and the table in which the spare part is represented.
- 4 - The identification code of the spare part to order.
- 5 - The quantity.
- 6 - The trade name and the correct address (including telephone, fax numbers and e/mail address) of the customer to whom the goods shall be sent.
- 7 - The desired means of forwarding (if this heading is not specified, PEGASO s.r.l. will reserve itself the right to choose the most suitable means of delivery).

The orders must reach PEGASO s.r.l., Via del Lavoro 14, ZAI Est 37047 San Bonifacio (VR).

PEGASO s.r.l. does not answer for any delay due to circumstances beyond its control.




Pegaso Lift W12 SERIES

LAST UPDATE: 10/10/2012

ELECTRONIC COMPONENTS

POS.	CODE	DESCRIPTION	U.Q.
01	2490MPCAN	N.E. 24V 90A Electronic controller.	01
02	18.062.000	80AFuse	01
03	08098700	Complete key emergency switch.	01
04	08099700	Key for emergency switch	01
05	Fr531	Speed reduction switch for lifted load	01
06	11.069.000	Buzzer	01
07	CBHD124V10A	Internal battery charger 24V 10A.	01
08		220V 10A Fuse for internal battery charger.	01
09		Electric supply cable for internal battery charger	01
10	807A-800-0111	Hours counter	01
11	POMP.200252393018	Oleodynamic unit assembly.	01
12	10529	Traction motor wheel	01


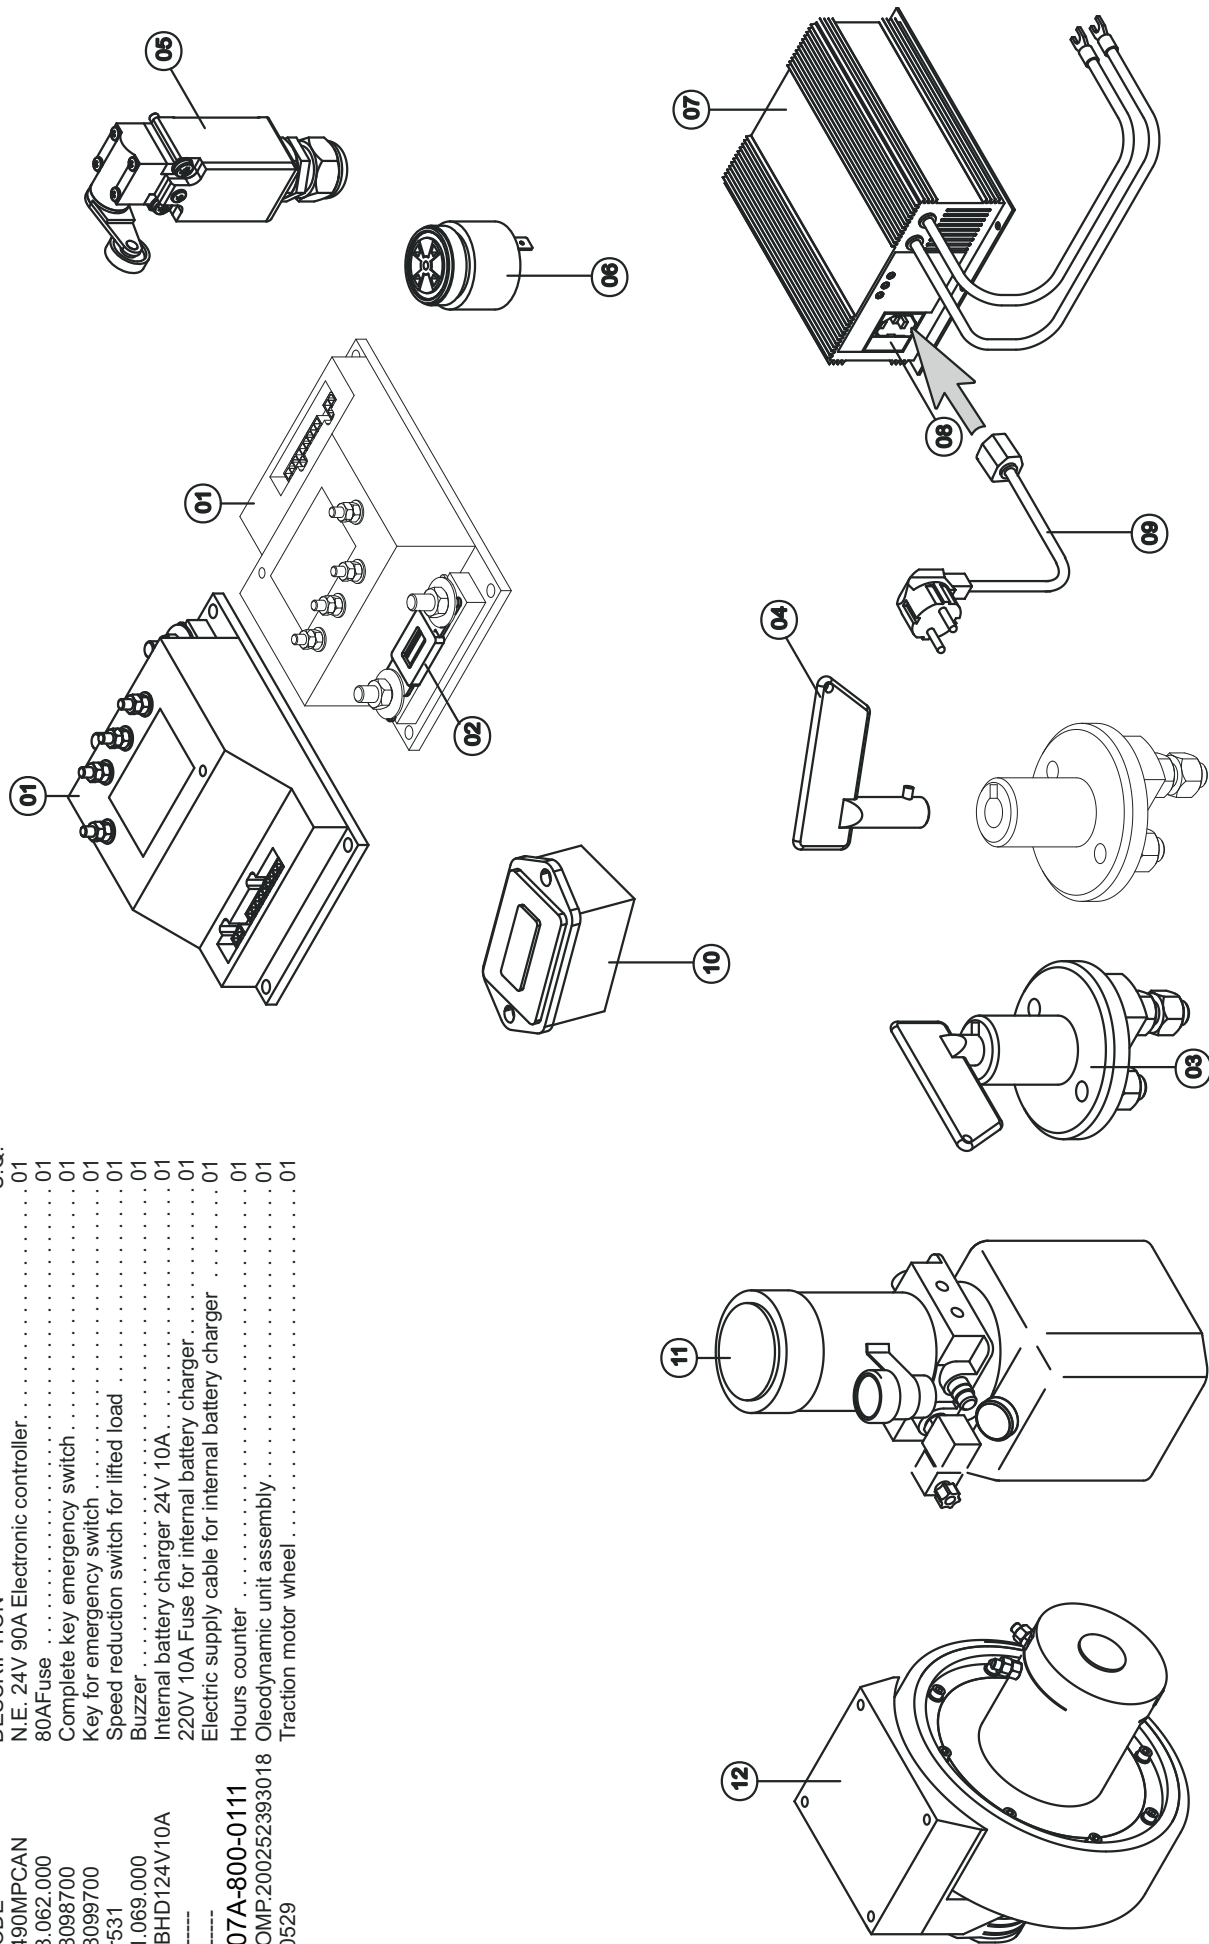




Pegaso Lift W12 SERIES

FRONT ROLLER AND CASTOR WHEEL

POS.	CODE	DESCRIPTION	U.Q.
01	1533	ZØ80×70 Roller	02
02	CW055	Pin of the roller	02
03	Trade	Washer Ø21×37 UNI6592	04
04	25866	Castor wheel assembly	01
05	8017	Castor wheel without support Ø150×40	01

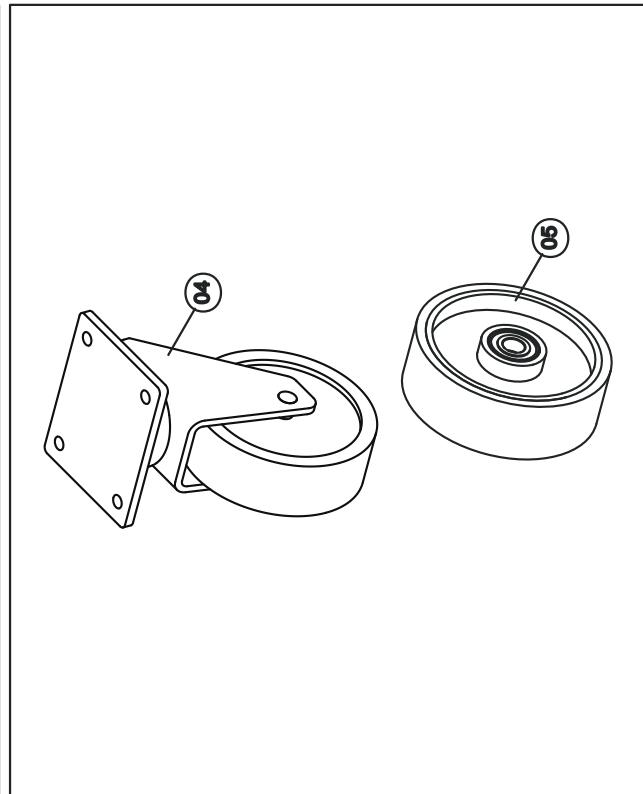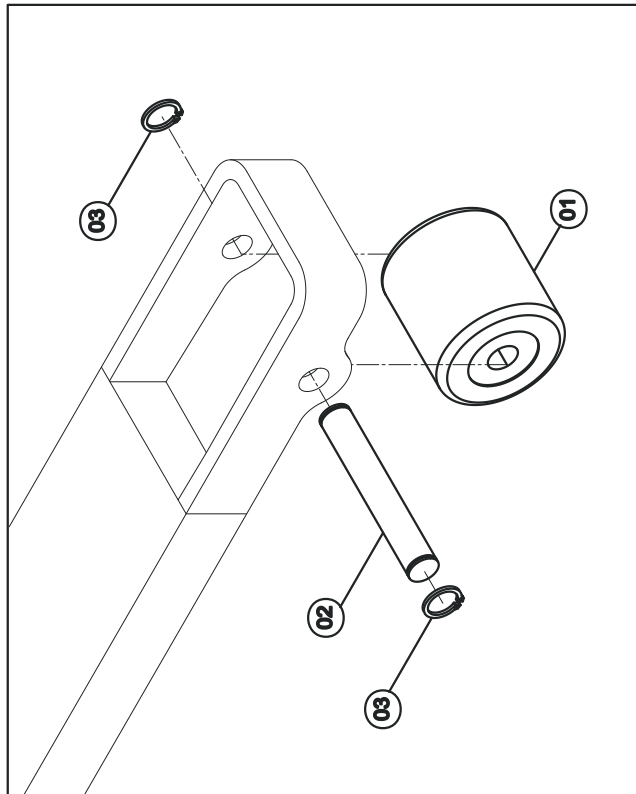




Pegaso Lift W12 SERIES

OLEODYNAMIC CYLINDER


POS.	CODE	DESCRIPTION	U.Q.
01	W40-60-750	Oleodynamic cylinder for W12/16	01
	W40-60-1160	Oleodynamic cylinder for W12/24	01
	W40-60-1410	Oleodynamic cylinder for W12/29	01
	W40-60-1760	Oleodynamic cylinder for W12/36	01
	W40-60-2060	Oleodynamic cylinder for W12/42	01
02	GRNT40-50	Sealing head elements for single-acting and plunger	01
03	GRNPSE40-50	oleo-dynamic cylinder (ST40 - AL50)	01
		Sealing rod elements for single-acting oleo-dynamic	01
		cylinder (ST40-AL50)	01
04	VUBA12	Safety block valve	01
05	RDLGR	Rilsan pipe 90° fitting	01

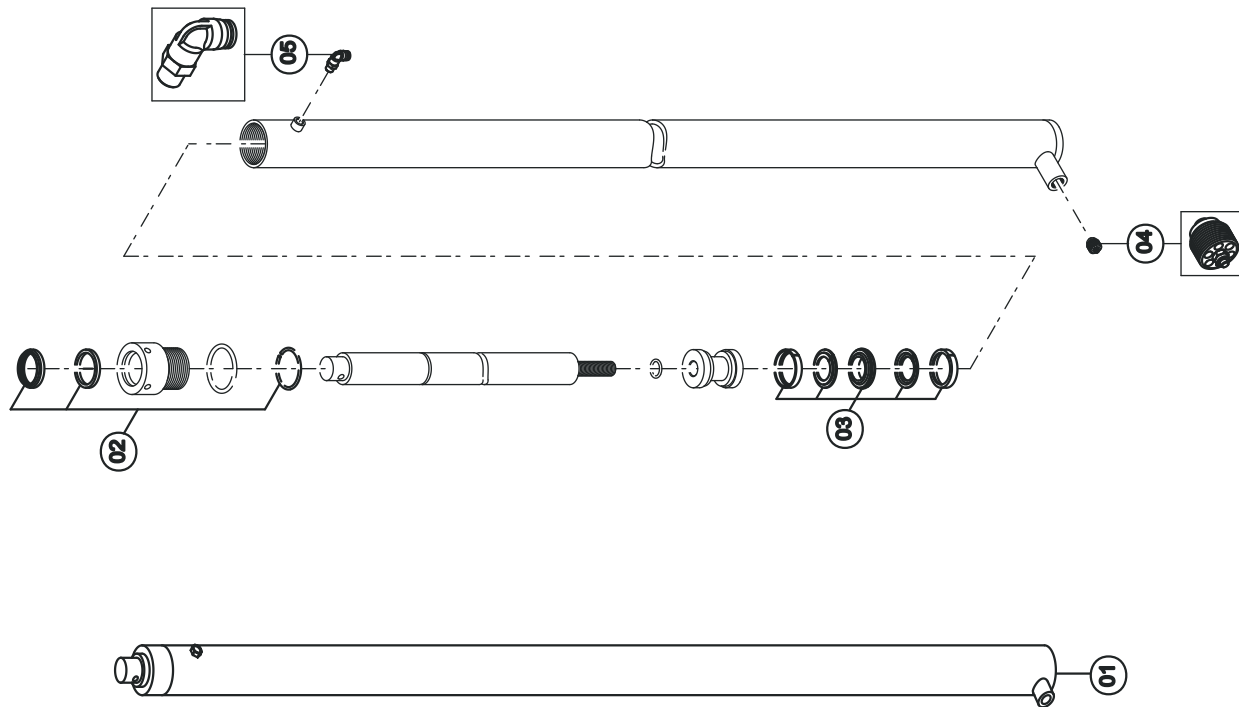

Pegaso Lift W12 SERIES

TRACTION MOTOR WHEEL


POS. CODE	DESCRIPTION	U.Q.
01	Fixing wheel ring screw	08
02	Wheel ring	01
03	Flange	01
04	Protection	01
05	Ball bearing	01
06	Gear	01
07	OR	01
08	Retaining ring	01
09	Al casting	01
10	Gasket	01
11	Ball bearing	01
12	Gear	01
13	Gear	01
14	Ball bearing	01
15	Retaining ring	01
16	Gasket for the plate of the brake	01
17	Plate of the brake	01
18	Ferodo	01
19	Seeger	01
20	Brake	01
21	Fan protection	01
22	Rod	02
23	Motor brushes support	01
24	Motor brushes	04
25	Bearing	01
26	Flange	01
27	Armature	01
28	Bearing	01
29	Flange	01
30	OR	01
31	Gear	01
32	Seeger	01

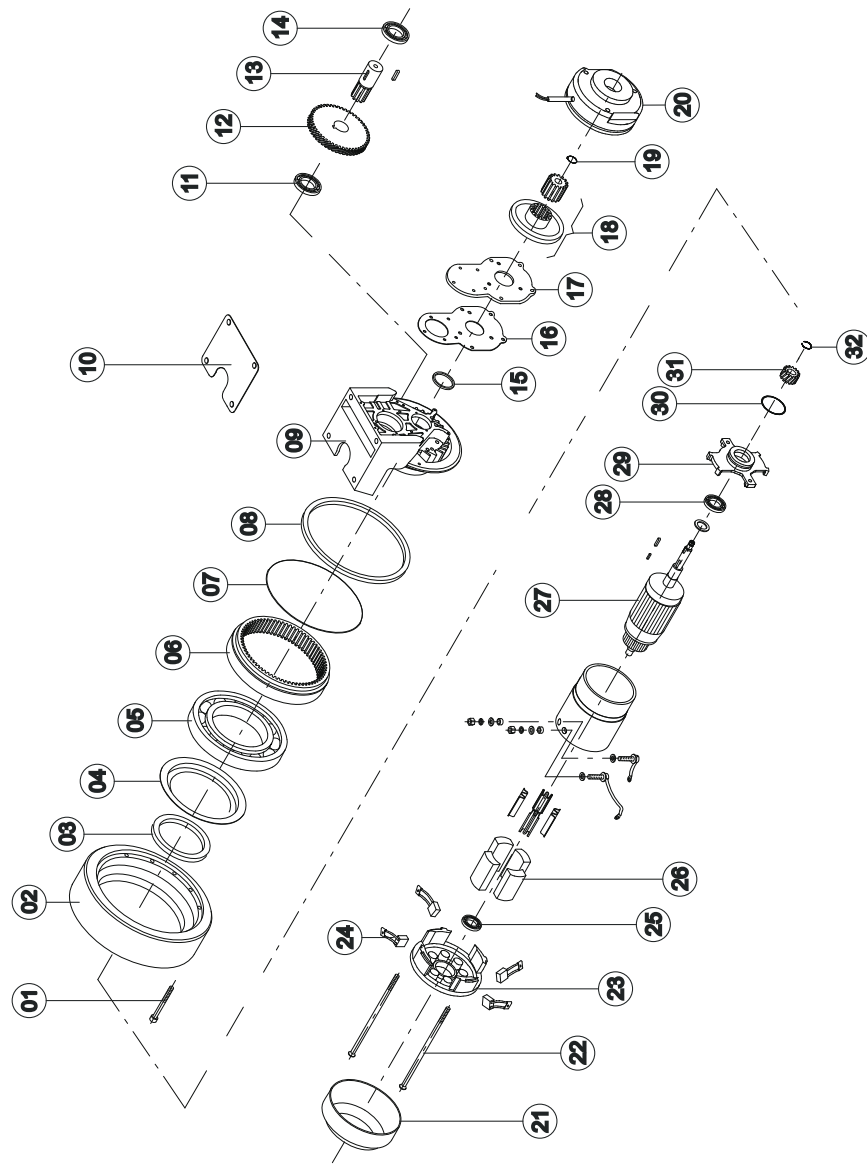

Pegaso Lift W12 SERIES

OLEODYNAMIC UNIT ASSEMBLY


POS. CODE	DESCRIPTION	U.Q.
01	Housing UP100	01
02	Oil seal	01
03	Pressure relief valve	01
04	Check valve	01
05	Valve cavity plug	01
06	Flow control valve	01
07	Directional valve without coil and connector	01
08	Directional valve solenoid	01
09	Connector	01
10	Lowering valve assembly	01
11	Plug	01
12	Gasket	01
13	Filter conveyor	01
14	Screw	04
15	Gear pump	01
16	Suction	01
17	Tank	01
18	Filler cap	01
19	Oil drain plug	01
20	Fixing kit	04
21	Screw	04
22	Tank fixing clip	01
23	Drive coupling	01
24	Drive bush	01
25	Drive assembly	01
26	Motor	01
27	Electromagnetic switch	01

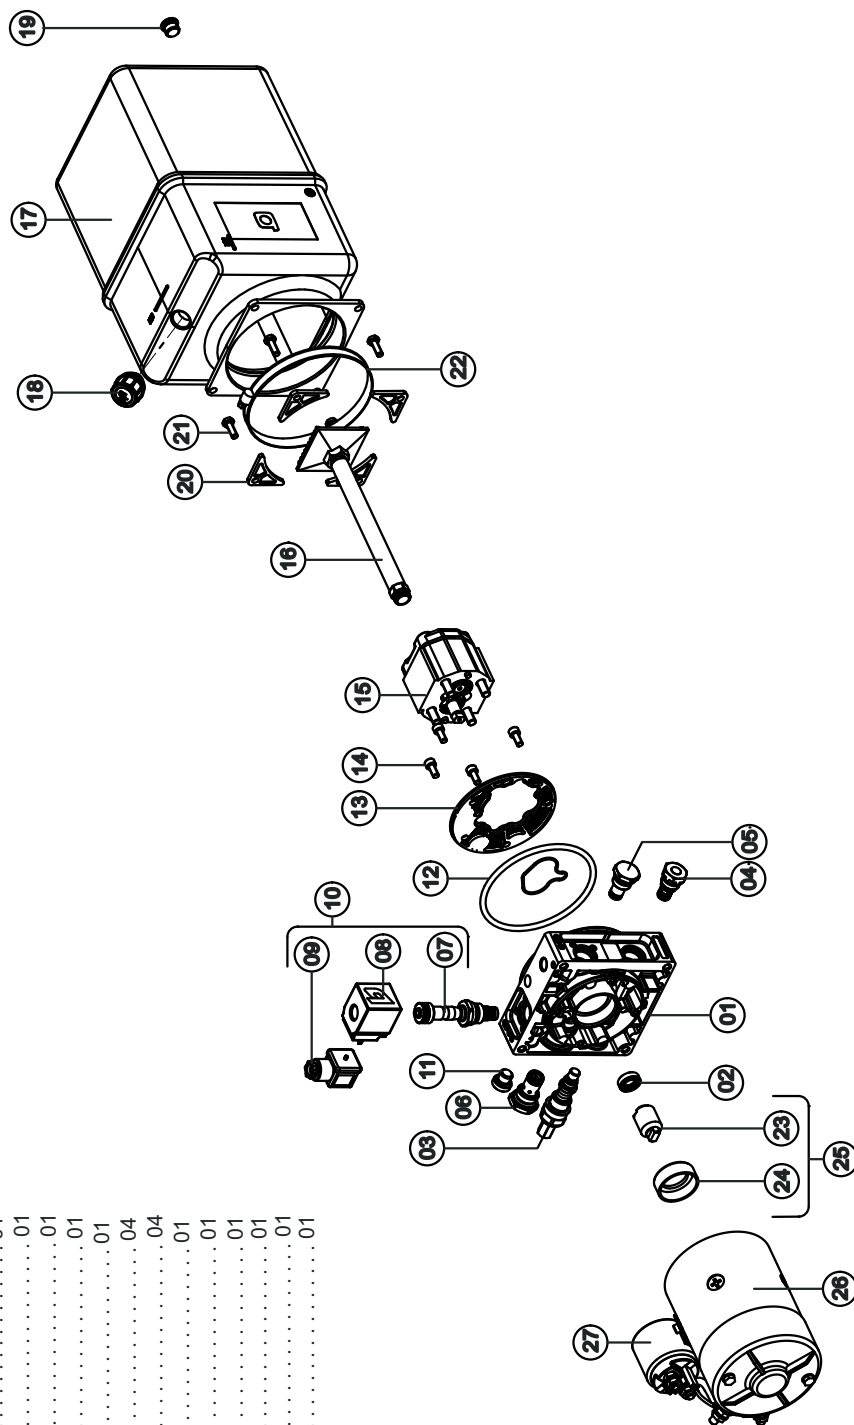

Pegaso Lift W12 SERIES

REAR COVER




POS.	CODE	DESCRIPTION	U.Q.
01	COFW12	Plastic rear cover	01
02	CW040	Rear lower plate protection	01
03	9138	Mast protection grill	01
04	9142	Plate to fix max protection grill	08-12
05	400-20M4	Storage cover hinge	02
06	LMT1109	Paper block	01

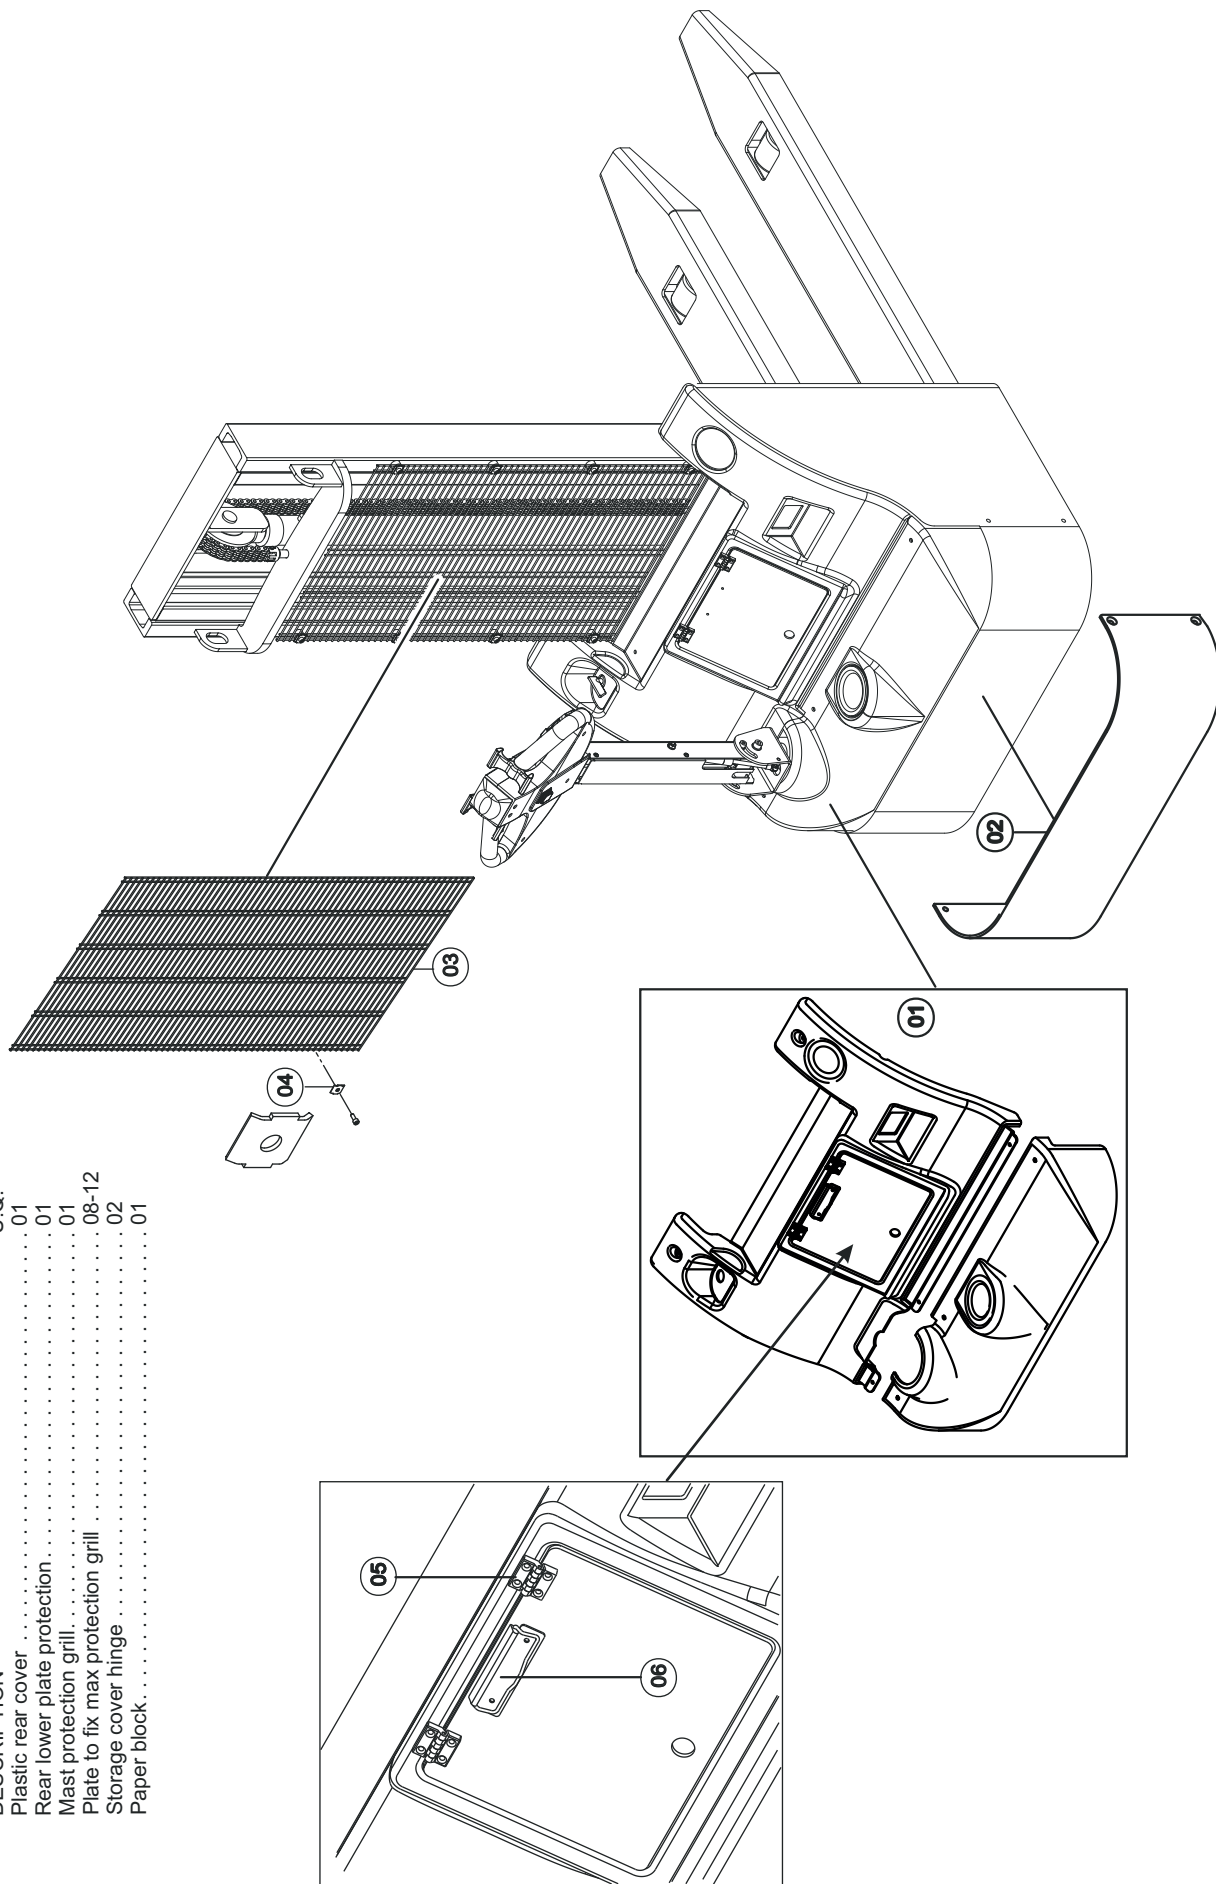



Pegaso Lift W12 SERIES TILLER ARM ASSEMBLY

POS. CODE	DESCRIPTION	U.Q.
01	Tiller head	01
02	Clamp with rubber	01
03	Gas spring	01
04	Tiller arm	01
05	Cover of tiller arm	01
06	Tiller arm fork	01
07	Tiller arm pin	01
08	Tiller arm micro/switch	01

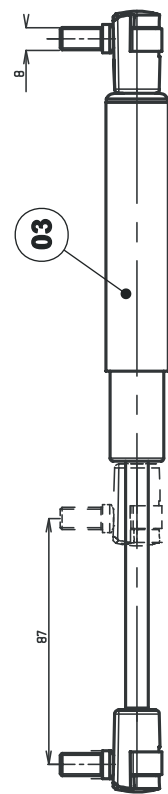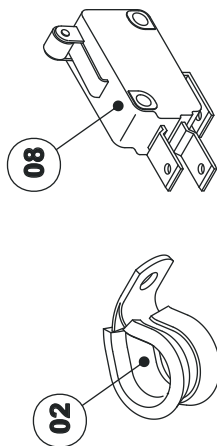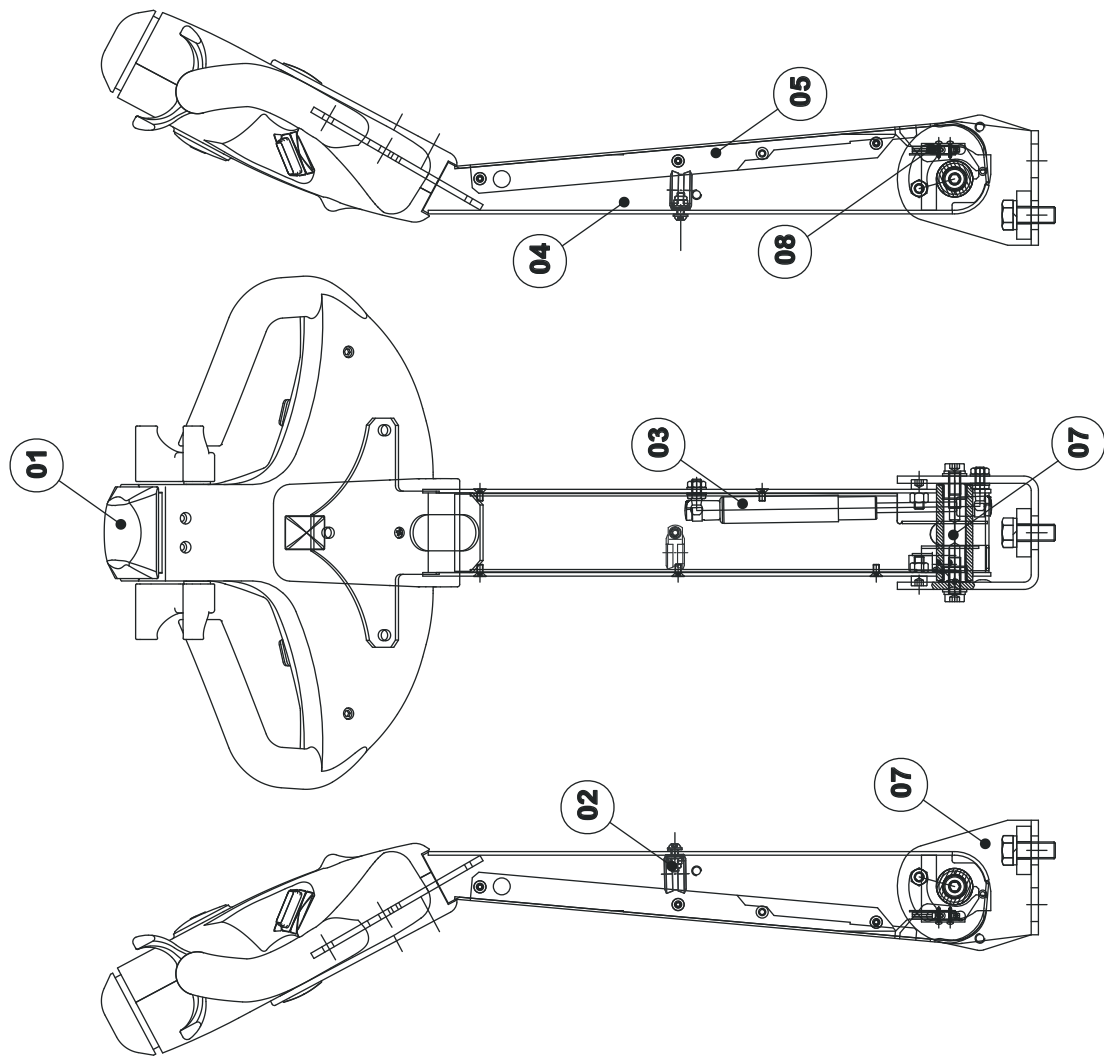




Pegaso Lift

W12 SERIES

DUPLEX MOBILE MAST ASSEMBLY

POS.	CODE	DESCRIPTION	U.Q.
01	MW040	Mobile mast assembly H=24.....	01
	MW041	Mobile mast assembly H=29.....	01
	MW042	Mobile mast assembly H=36.....	01
	MW058	Mobile mast assembly H=42.....	01
02	ECO044	Pulley pin	01
03	ECO078	Pulley spacer	02
04	ECO077	Pulley	01
05	3206-2RS1	Bearing	01
06	MRS901	Ball bearing Ø70	04
07	AS.3005PS	Small disk for adjustable sliding block	04
08	10002.102	Adjustable sliding block	04
09	Trade	Retaining ring for shaft Ø30 UNI7435.....	02
10	Trade	Slotted set screw M10x12 UNI5923	08
11	Trade	Retaining ring for bore Ø62 UNI7437	02

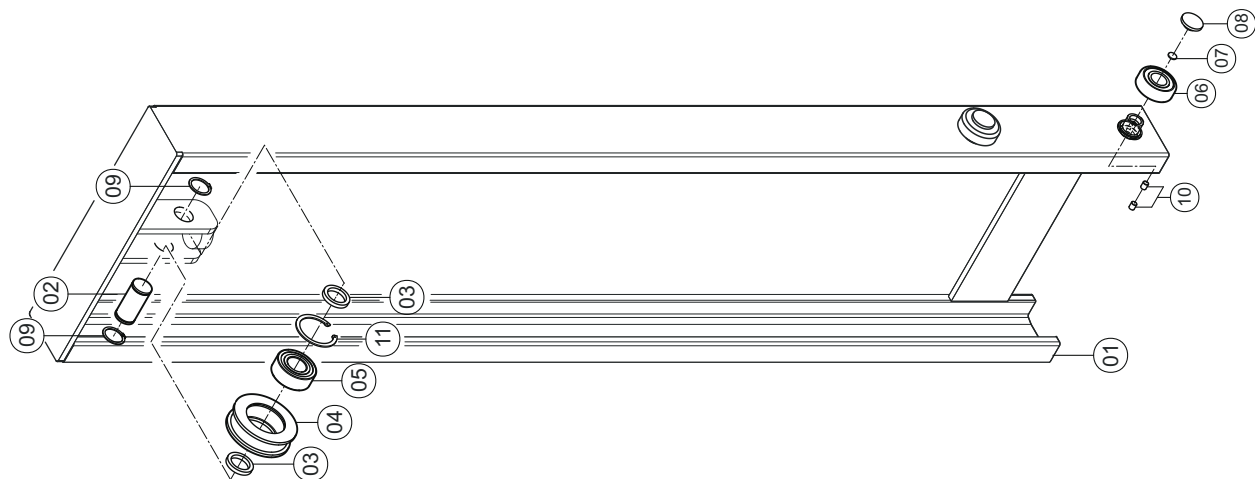




Pegaso Lift W12 SERIES

DUPLEX FORKS ASSEMBLY

POS.	CODE	DESCRIPTION	U.Q.
01	FCWAVED1140	Duplex forks assembly	01
02	MRS901	Ball bearing Ø70	04
03	AS.3005PS	Small disk for adjustable sliding block	04
04	10002.102	Adjustable sliding block	04
05	Trade	Slotted set screw M10×12 UNI5923	08
06	18109	Hooking pin for BL534 chain tension rod + Split pin	02

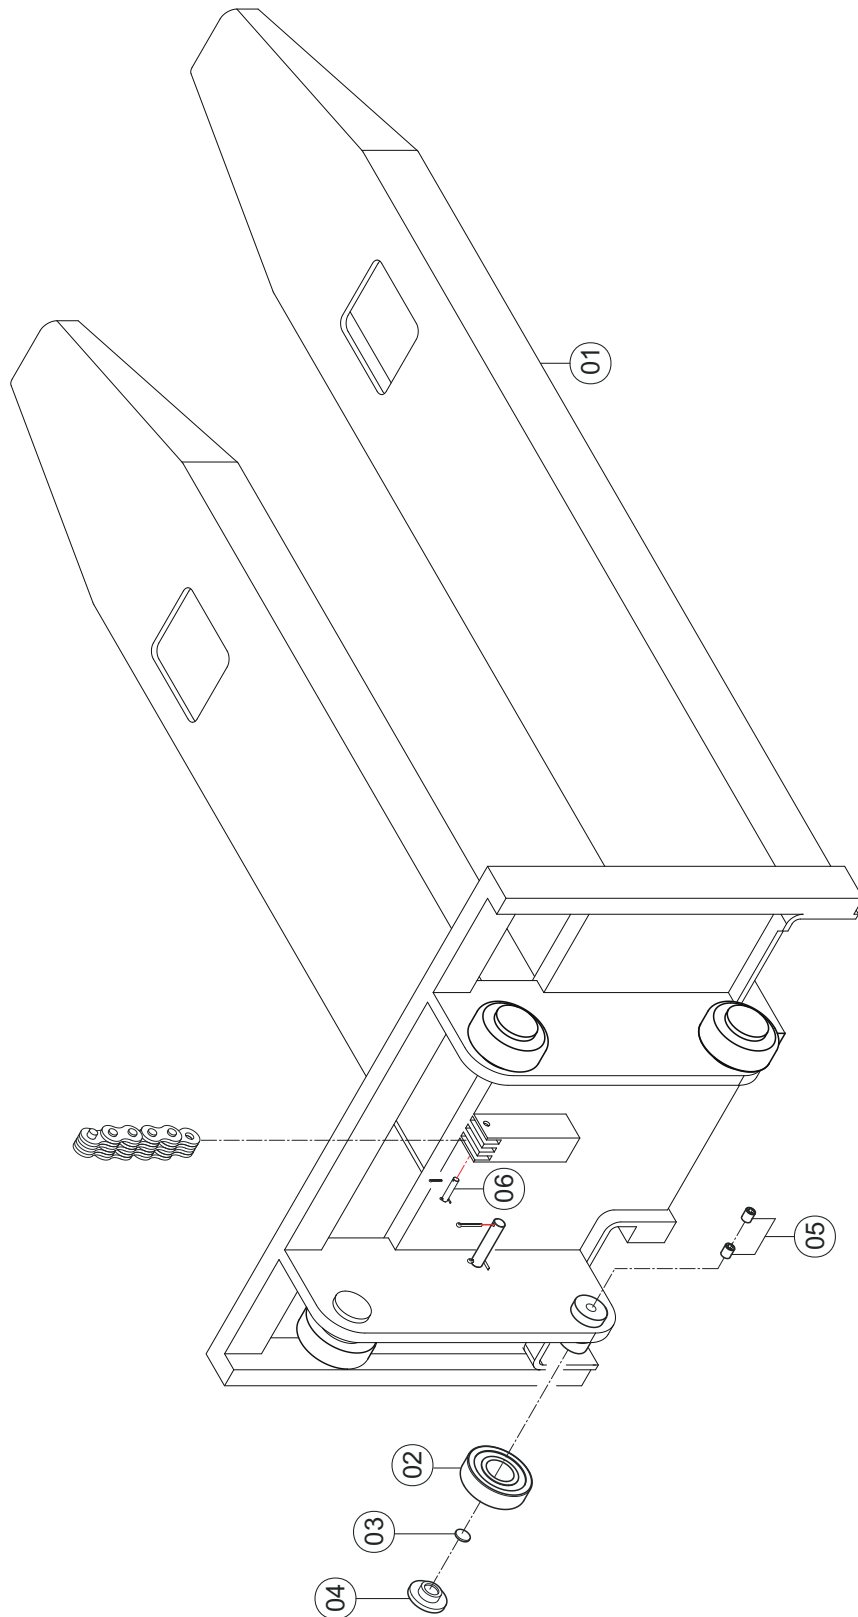



Via del Lavoro 14 - 37047
San Bonifacio (VR - Italy)

Tel.: +39 045 766.55.70
FAX: +39 045 766.56.98

E-Mail:
info@pegasolift.com

Web-site:
www.pegasolift.com